



E-Access E1196 App Instructions:

Introduction of App's Main Page

Profile:

Enter a Master / User name for this phone only at the first time.

Setting:

E-Access Device Settings Page.

Device:

E-Access Device Name.

Auto:(Automatic Access for Handsfree):

Turn ON/OFF for the Automatic Access Handsfree function.

Bi-stable Relay:

When you select to enable Bi-stable function, you can press down the E button for few seconds to activate and keeps the door unlocked indefinitely.



Click on the device name (e.g.E1196 as shown) and pull down all the available E-Access devices around you.

You can select a device from the list as shown, or you can press "Auto" in the list so that E-Access will operate with the closest E-Access device around you.



Enter personal name.




Master/User Logon E-Access:

Select an E-Access device from the E-Access List and enter the password given by the Master.

Logon Notes:

1. The Master / User must enter a correct Password to logon.
2. How to Reset/Change the Master account:
 - (1) Restart the power of E-Access device, and then enter the password 12345 (default) within 30 seconds.
 - (2) Next, click on the "Register" button to register, then return to the first page, and you then become the Master.

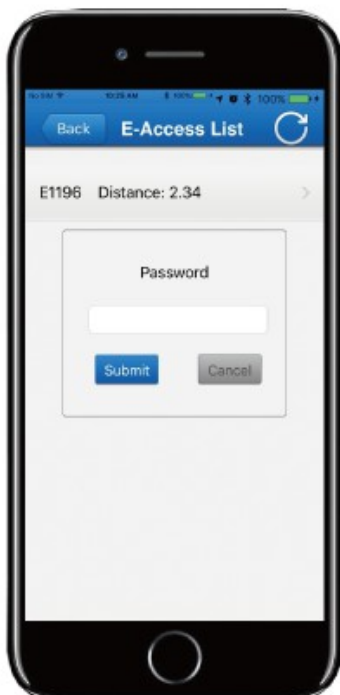


Master / User Logon E-Access:

Select an E-Access device from the E-Access List and enter the password given by the Master.

Logon Notes:

1. The Master / User must enter a correct Password to logon.
2. How to Reset/Change the Master account:
 - (1) Restart the power of E-Access device, and then enter the password 12345 (default) within 30 seconds.
 - (2) Next, click on the "Register" button to register, then return to the first page, and you then become the Master.

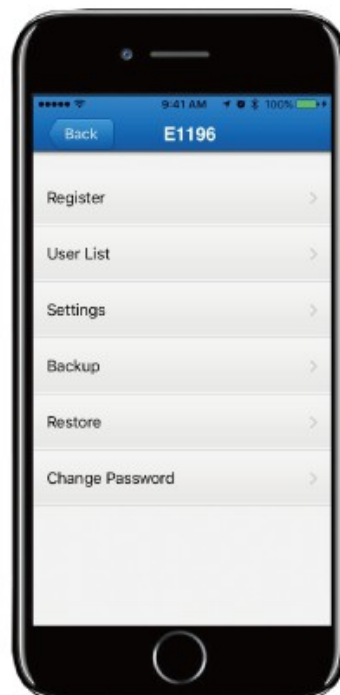

Master Setting Page:

Register:

You must click on Register button to complete registration before opening the door by your phone.

User List:

Only the Master can view/enable/delete all the Users and view User passwords.

Settings:

E-Access settings include Proximity read range, Device name, Relock time, Max of Incorrect PIN Attempts, and Delete all Users.

Backup:

Backup all Users data from the device.

Restore:


Restore the last backup data.


Change Password:

We recommend changing Master's password right after you reset/change the Master account. (Default Master password:12345)



User List:

All authorized Users can be viewed on the User List. Click on  to add a new User.

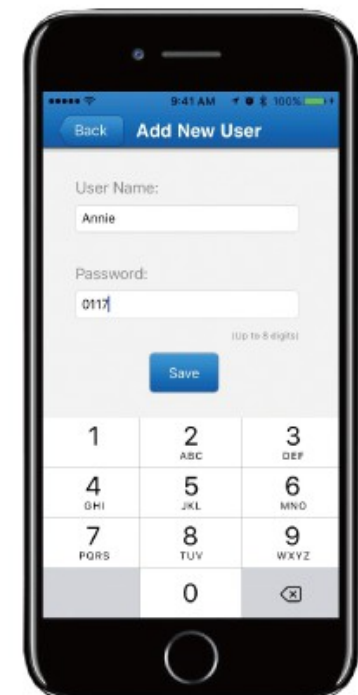

Add New User:

Add User Name:


The Master enters a User name. The User name must be the same as shown on the User profile of the app.

Password:

The Master assigns a password for the new User to register on E-Access system.



The new user will be shown on the User list.

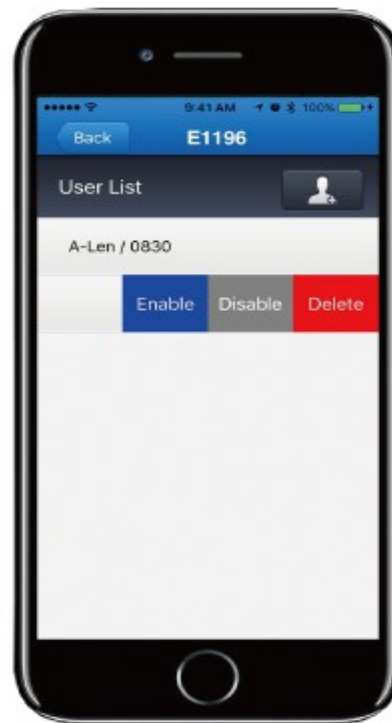

Master can slide from right to left so a User can be Enabled /Disabled/Deleted by the Master.

Enable:


Enable a User account.

Disable:

Disable a User account.

Delete:

Delete a User account.

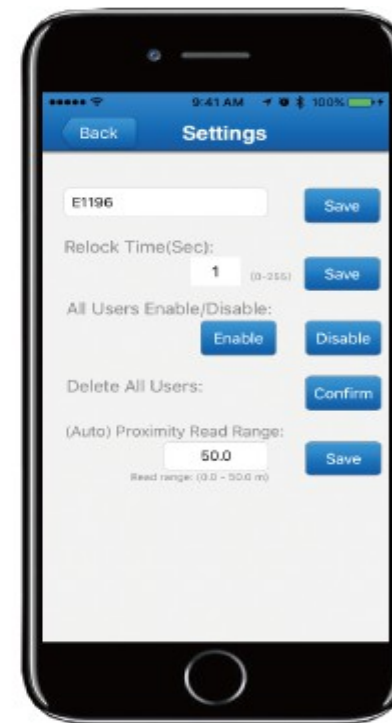

**Settings Page
E-Access Name:**

Edit your name for your E-Access device.

Relock Time (sec):

Set the time for relock time.

Max of Incorrect PIN Attempts:

Maximum Incorrect PIN entries when used with keypads.

Enable/Disable All Users:

Enable or disable all User accounts except the Master.

Delete All Users:

Delete all User accounts except the Master.

Proximity Read Range:

Set proximity read range for E-Access Auto access for Handsfree. ("0" means no limits.)